







EC DECLARATION OF CONFORMITY

WE:

POLAR TOOLS A/S

Soldalen 9, DK-7100 Vejle, Denmark

Declare in sole responsibility that the equipment

EQUIPMENT: DRILL

MODEL/SERIAL NO.: 6130-0010

to which this declaration applies, complies with these normative documents:

MACHINERY DIRECTIVE: 2006/42/EC

and conforms to the following EN standards,

EN ISO 12100:2010 EN ISO 11148-6:2010

Authorized representative established within the EU(if applicable):

Company Name: Polar Tools A/S

Company Address: Soldalen 9, DK-7100 Vejle, Denmark

Person responsible for compiling the technical file established within the EU:

Name, Surname: Mikael Linde

Address: Jens Grøns Vej 1, DK-7100 Vejle, Denmark

Note: This declaration becomes invalid, if technical or operational modifications are introduced without the manufacturers consent



Read the operator's instructions before operating the tool.



Wear eye protection device.



Wear ear protection device.

Name and Signature/Position Title

Date and place

Mikael Linde, Owner

Denmark, January 10, 2013

OPERATING INSTRUCTIONS







IMPORTANT

Read these instructions carefully before installing, operating, servicing or repairing this tool. Keep these instructions in a safe accessible place.

MANUFACTURER/SUPPLIER

Polar Tools A/S

Soldalen 9 · DK-7100 Vejle · Denmark

Tel: +45 7584 1122

E-mail: info@polartools.com · www.polartools.com

PRODUCT TYPE 10 MM DRILL

MODEL 6130-0010



Actual product may be slightly different from the product described here in.

SAFETY RULES

Read, understand and keep these instructions!



WARNING

Failure to follow all instructions listed below may result in serious injury.

WORK AREA HAZARD & PERSONAL SAFETY


- 1. Keep your work area clean and well lit.
- Do not operate power tools in explosive atmospheres, such as in the presence of combustible liquid, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- 3. Disconnect tool before performing service or when not in use.
- 4. High sound levels can cause permanent hearing loss. Use hearing protection during operation.
- 5. Maintain a balanced body position and secure footing.
- Slips/Trips/Falls are a major cause of serious injury or death. Be aware of excess hose left on the working floor.
- Repetitive work motions, awkward positions and exposure to vibration can be harmful to hands and arms.
 If numbness, tingling, pain or whitening of the skin occurs, stop using the tool and consult a physician.

8. Always wear impact-resistant eye and face protection when operating, repairing or performing maintenance of the tool or while changing tool accessories.

TOOL USE AND CARE

- 1. Use support handle or other method to secure and support the work piece to a stable platform.
- Do not force the tool. Use the correct tool for your application. Using the correct tool which is specifically designed for a select job will provide better tool performance and make the job easier.
- 3. Disconnect the air supply before making any adjustments, changing accessories, or storing the tool. Always disconnect the air supply before performing any inspection, maintenance or tool cleaning.
- 4. Use only accessories recommended by the manufacturer for your model.
- 5. When using a tool that is designed to have a guard, the guard should be in place to provide protection from flying debris, grinding residue or sparks.
- 6. Do not leave the tool unattended when it is connected to an air supply.
- 7. Use compressed air only.

AIR SUPPLY SETUP AND CONNECTION

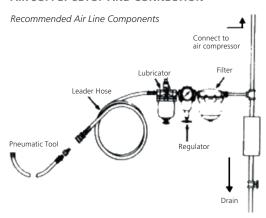

- 1. For optimal results you should incorporate a regulator, oiler and an inline filter.
- If you are not using an automatic lubricating system, before operating the tool, add a few drops of Pneumatic Tool Oil to the air-line connection. Add more after each hour of constant using.
- 3. Do not exceed maximum air pressure of 90 PSI/ 6,2 bar or as stated on tool nameplate.

OPERATING INSTRUCTIONS

Always shut off air supply, relieve hoe of air pressure and disconnect tool from air supply when changing accessories.

Hold the tool correctly: be ready to counteract sudden movements, particularly at drill bit breakthrough.

The drill bit can suddenly bind and cause the workpiece or tool to rotate, causing arm or shoulder injuries.

Side handles are commended for straight drills with a chuck capacity larger than 6.5 mm (1/4 inch), or if the torque reaction may exceed 4 Nm (3 lbf.ft).

Side handles are commended for pistol-grip drills with a chuck capacity larger than 10 mm (3/8 inch), or if the torque reaction may exceed 10 Nm (7.5 lbf.ft)..

LUBRICATION & MAINTENANCE


Lubricate the tool daily with a high grade of air tool oil. If no air line oiler is used, run a teaspoon of oil through the tool.

The oil can be squirted into the tool air inlet, or into the hose at the nearest connection to the air supply, prior to operating the tool.

A rust inhibitive oil is acceptable for air tools.

| PARTS NO. | DESCRIPTION | |
|---------------|----------------------------------|--|
| P6130-0010-01 | Motor Housing | |
| P6130-0010-02 | Pin (2,5 x 26,8) | |
| P6130-0010-03 | Air Inlet | |
| P6130-0010-04 | Trigger | |
| P6130-0010-05 | Valve Stem | |
| P6130-0010-06 | Valve Bushing | |
| P6130-0010-07 | O-Ring (4,5 x 2,5) ● | |
| P6130-0010-08 | O-Ring (15,5 x 1,5) ● | |
| P6130-0010-09 | O-Ring (12 x 1,6) • | |
| P6130-0010-10 | Reverse Lever | |
| P6130-0010-11 | Motor Gasket ● | |
| P6130-0010-12 | End Plate | |
| P6130-0010-13 | Ball Bearing (2) (626zz) | |
| P6130-0010-14 | Rear End Plate O | |
| P6130-0010-15 | Rotor | |
| P6130-0010-16 | Rotor Blade (5) ● | |
| P6130-0010-17 | Pin (2,5 x 57) ° | |
| P6130-0010-18 | Cylinder • | |
| P6130-0010-19 | Front End Plate • | |
| P6130-0010-22 | Internal Gear | |
| P6130-0010-23 | Planet Gear (3) o | |
| P6130-0010-24 | Pin (3) (4 x 13,8) | |
| P6130-0010-25 | Needle Bearing (3) (4 x 7 x 8) O | |
| P6130-0010-26 | Work Spindle | |
| P6130-0010-27 | Ball Bearing (2) (6201z) | |
| P6130-0010-28 | Clamp Nut | |
| P6130-0010-29 | Washer | |
| P6130-0010-30 | Keyless Chuck (10 mm) | |
| P6130-0010-31 | Screw (M5 x 25) | |
| P6130-0010-33 | Exhaust Diffuser | |
| P6130-0010-34 | Screw (2) (TS2,9) | |
| P6130-0010-35 | Damping Material (2) | |
| P6130-0010-38 | Valve Spring | |
| P6130-0010-64 | Decoration Ring | |
| P6130-0010-65 | O-Ring (15,7 x 1,7) | |
| P6130-0010-70 | Service Kit | |
| P6130-0010-71 | • Rebuilt Kit | |
| | | |

10 MM DRILL

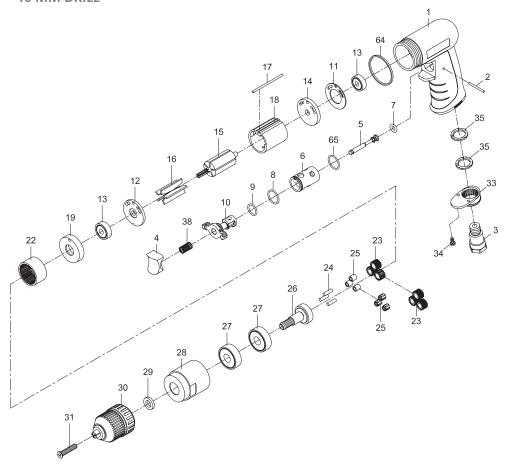

TECHNICAL SPECIFICATION

| PRODUCT TYPE 10 mm Drill | | MODEL: 6130-0010 |
|-----------------------------|-----------------------------------|--|
| FREE SPEED: 1.800 RPM | AIR INLET: 1/4" NPT | AVERAGE AIR 113 L/Min CONSUMPTION: (4 CFM) |
| CHUCK SIZE: 3/8"(10 mm) | HOSE SIZE: 3/8" (10 mm) | WEIGHT: 1,1 Kg |
| SPINDLE THREAD: 3/8"-24 | AIR PRESSURE: 6,2 Bar (90 P.S.I.) | |