

OPERATING INSTRUCTIONS

PRODUCT TYPE


BALL BEARING EXTRACTOR SET

MODEL

8478-0001



1. Make sure that the spindle is perfectly cleaned and greased.
2. Check that the shaft is punched. Otherwise use a point protector.
3. See that arms are evenly spread.
4. Put the force extraction by turning the spindle. Do not hit the spindle.
5. Do not maintain the spindle out of the body too much time.
6. Wear all necessary safety equipments.

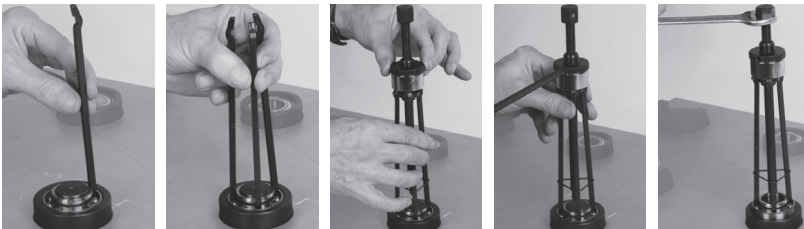

Ball bearing puller is used mainly when the bearing is not accesible neither from the exterior neither from the interior