

## OPERATING INSTRUCTIONS

### PRODUCT TYPE

ADJUSTABLE BALL POINT  
EXTRACTORS LEVER

### MODEL

8481-SERIES



Item no. 8481-0056




Item no. 8481-0091



1. Use all the necessary personal protective equipment.
2. Make sure that the spindle is perfectly clean and greased.

1. Place the puller pin in the hole of the body until the correct height is reached.
2. Insert the separator in the ball joint.
3. Turn the screw clockwise to remove the ball joint.
4. As the ball joints usually have a conical shape, it is necessary to hit with a hammer to unlock the cone.
5. Hit the head of the spindle carefully, (nylon hammer recommended).

*It is NOT about taking out the ball joint sharply.*

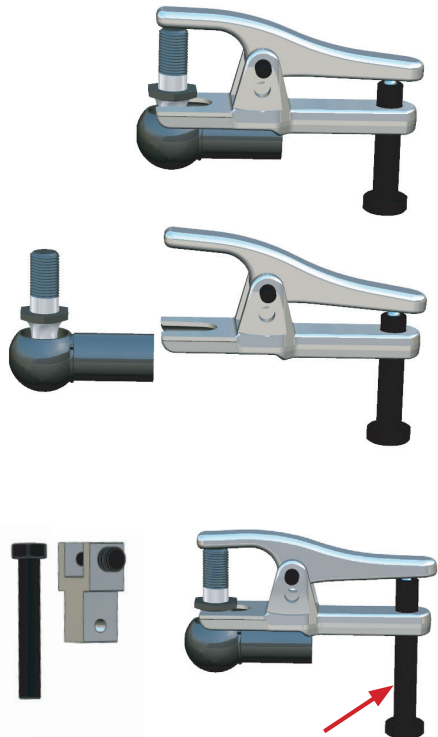

### Attention:

When working with 8481-0090 without extension, be very careful not to bend the spindle if you pull with very large wrenches. Note that the length of the spindle outside the thread is very large.