

OPERATING INSTRUCTIONS

PRODUCT TYPE


UNIVERSAL 2-JAW PULLER WITH
EXTREMELY NARROW JAWS /
3-JAW PULLER WITH NARROW JAWS

MODELS

8485-SERIES /
8486 SERIES





1. Make sure that the spindle is perfectly clean and greased
2. Check that the shaft is punched. Otherwise use a point protector
3. See that arms are evenly spread
4. Apply force by turning the spindle. Never strike the spindle.
5. Do not let the spindle protrude excessively from the body
6. Wear all necessary safety equipments
7. Check the position of the jaws as explain below.

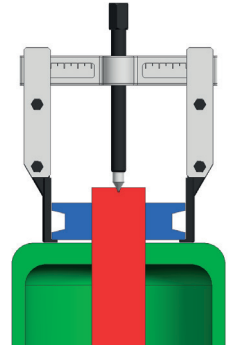

CORRECT USE OF JAWS

The jaws are very slim. When the part to be extracted is tied up make sure to touch the jaw. The part must be completely supported.

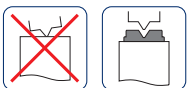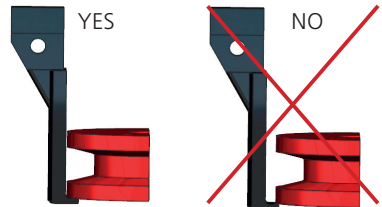

Note:

If the shaft doesn't have a centre hole, use a point protector in order to prevent possible damage for the shaft and the puller.