

OPERATING INSTRUCTIONS

PRODUCT TYPE
STUD EXTRACTORS


MODELS
8489-SERIES



Broken stud extractor. The body contains an eccentric held by a screw. The hole is grooved in order to improve the blocking system. It allows to extract the stud in a very centred position.



Use all the necessary personal protective equipment.

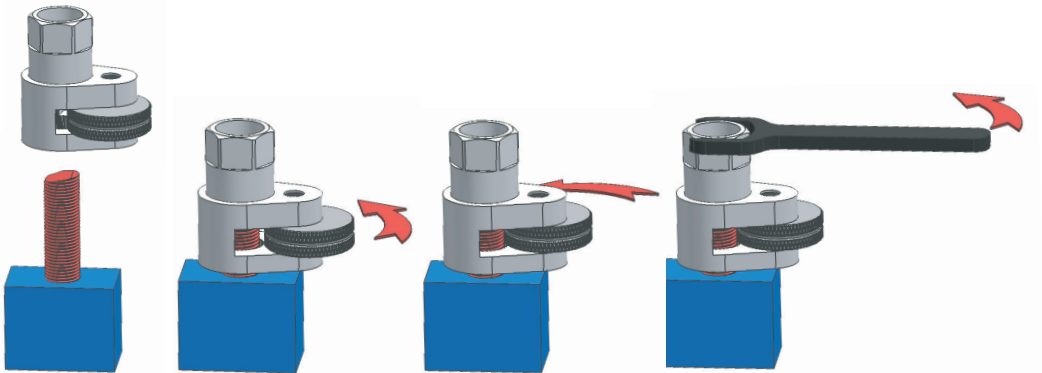

1. Insert the body of the extractor in the stud.
2. Block with the proper wedge.
3. Turn to the left with a wrench.