

## MODELS




Model	■	Nm	Lbf.ft	mm	Kg
7212-0060	1/2"	10-60	7,5-44	380	1,00
7212-0100	1/2"	20-100	15-70	450	1,20
7212-0200	1/2"	40-200	30-150	450	1,20
7212-0350	1/2"	60-350	45-260	590	1,45
7234-0800	3/4"	160-800	120-59	1140	6,70
7234-1000	3/4"	200-1000	150-750	1340	7,40

## TORQUE WRENCHES

### 7200 SERIES



### AVOID IMPROPER USE

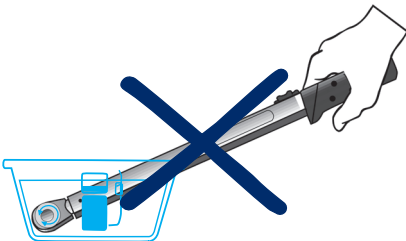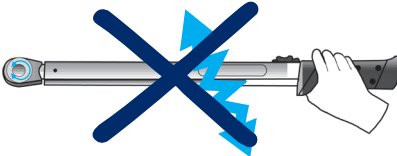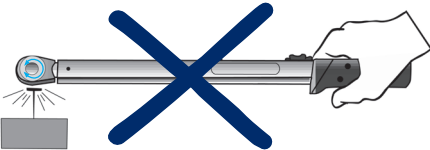

POLAR TOOLS A/S

SOLDALEN 9 . 7100 VEJLE . DENMARK


PHONE +45 7584 1122 . INFO@POLARTOOLS.COM

WWW.POLARTOOLS.COM


**polar**<sup>®</sup>  
airtools

## INSTRUCTIONS FOR USE


- Unscrew the knob.

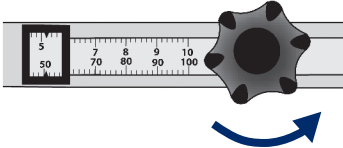

- Using the knob, move the scale until the required preset torque sign corresponds to the notch, fix it by screwing the knob again.




- The lower the torque required is, the more perceptible and wider the release is.

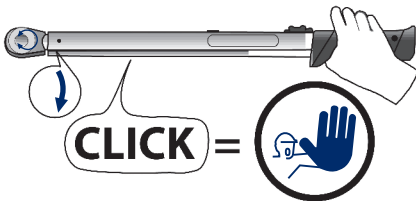

- It is not necessary to keep the tool set at the minimum load after use.

## RATCHET USE

- Select the torque direction (clockwise or anti-clockwise) turning the collar until it is locked.

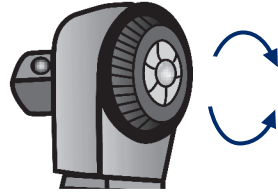

The calibration of the torque wrench is valid only by using interchangeable heads supplied by POLAR TOOLS AVS.

- Avoid dust and liquids filter in the reading scale.

- After using put back the torque wrench in its proper case.

