


WORKTOP INSTRUCTIONS

HOW TO STRAIGHTEN **WORKTOP ON 1300-1500**

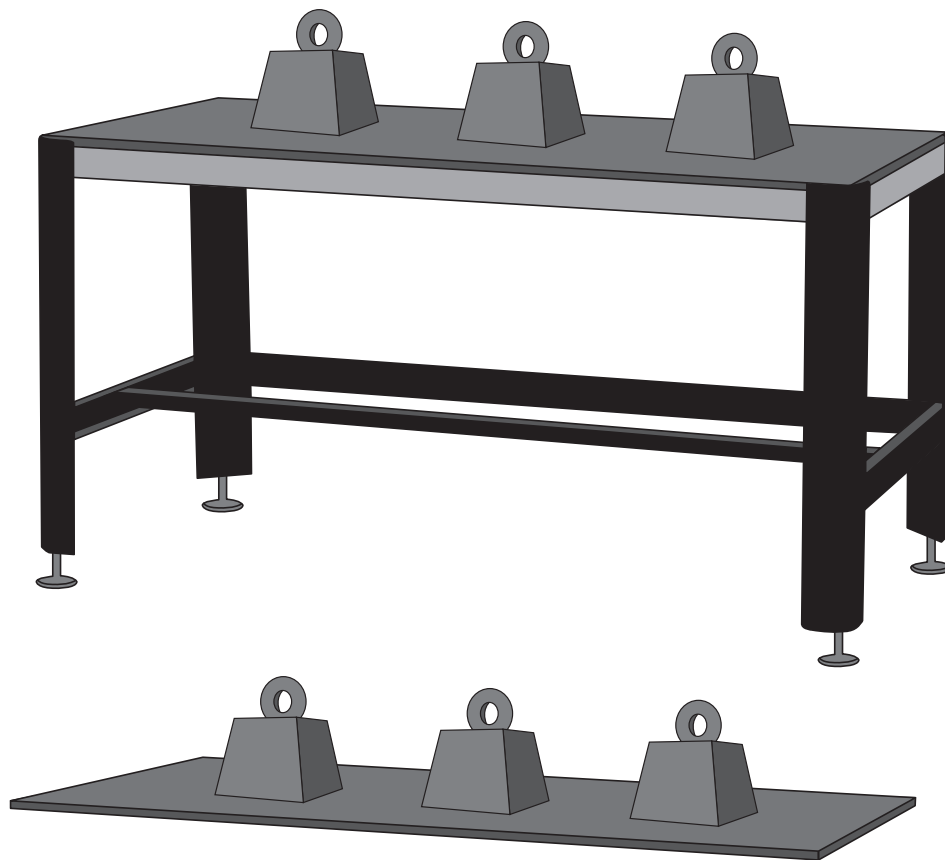

WORKTOP IS MADE OF PCV MATERIAL.

WHEN EXPOSED TO LARGE TEMPERATURE SWINGS THE WORKTOP MAY BEND.

PLACE THE WORKTOP IN ROOM TEMPERATURE (MIN. 21 DEGREES) WITH SOMETHING HEAVY ON TOP FOR 24 HOURS AND THE WORKTOP WILL BE STRAIGHTEN.